# **WWW.PRESI.COM**










# MAKE THE RIGHT CHOICE

### • INDENTER TYPE

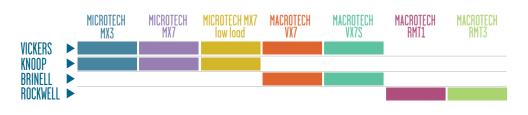

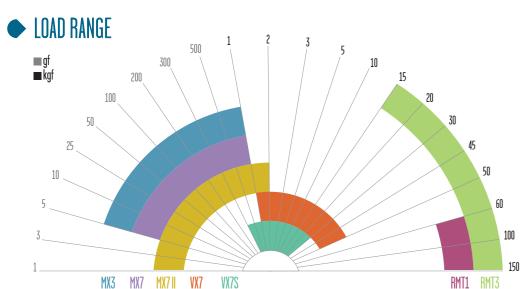

### • NUMBER OF TURRET POSITIONS

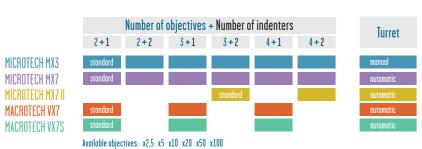

### ■ UPGRADABILITY - PACK VIEW ► PACK TOUCH MANUAL ► PACK TOUCH SEMI-AUTO

	PACK PRESI View	PACK PR	ESI Touch
	View Hardness	Touch Manual	Touch Semi-auto
INDENTATION TYPE			
Single indents	•	•	•
Manual pattern		•	
Semi-automatic pattern			•
EQUIPMENT			
Multilingual software for measurement and image analysis	•	•	•
USB2 digital camera, 1.3M pixels	•	•	•
Automatic light		•	•
Turret control		•	•
Motorized stage and joystick			•
Control box			•
FEATURES			
Manual or automatic measurement	•	•	•
Automatic storage of results and photos	•	•	•
Pattern settings		•	•
Hardness tester / PC communication		•	•
Overview			
Alerts for measurement errors and load differences		•	•
Analysis reports		•	•

### ♦ VICKERS

HARDNESS

The Vickers MX3 hardness tester with manual turret offers a complete solution in order to meet the needs of quality laboratories, as well as on-line controls.




- Manual turret up to 6 positions.
- Vickers and Knoop hardness.
- Automatic load application.
- High-rigidity frame.

# LOAD RANGE (gf)

### TECHNICAL FEATURES

	Standard	Option
Manual turret	2 objectives x10 x50 1 Vickers indenter	Up to 4 objectives including x10 and x50, 1 Vickers indenter and 1 Knoop indenter
Load application	Automatic load application	-
Indentation time	5 to 99s	-
Precision	0.01µm (x200 - x1000)	-
Magnification	x100 - x500	x25 - x1000
Max. measurable length	200µm	-
Data output	RS 232C output	-
Memory	999 max. memorized measurements	-
Conversions	Conversion to other scales according to SAE (J-417B), ASTM (E-140)	-
Max. sample height	120mm	-
Power supply	240V 50/60Hz	-
Touchscreen	LCD display with backlight	-
Visualisation/Measurement	Direct measurement in the eyepiece and results display	-
Lighting	LED	-

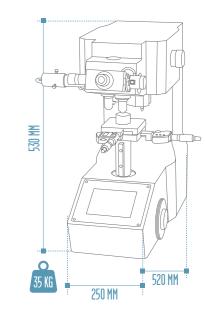

#### **AVAILABLE OPTIONS**





Ref. 71113











71164 71134

Objectives

VICKERS KNOOP











	71142	x10
-	71129	x20
	71143	x50
	71135	x100
	Turret	
	71131	3-position turret for objectives
	71130	4-position turret for objectives
	71115	2 indenter Knoop and Vickers
_	Standar	d vices
	71133	50mm opening
	71199	100mm opening
,	Sample	holders and removable holders
	71157	Sample holder for non-mounted samples
	71109	Single place sample holder
	71175	Sample holder 4 places
	71176	Sample holder 6 places
	71174	Removable holder ø 25mm
	71144	Removable holder ø 25.4mm
	71110	Removable holder ø 30mm
	71111	Removable holder ø 31.7mm
	71145	Removable holder ø 38.1mm
	71125	Removable holder ø 40mm
	71173	Removable holder ø 50mm
	Other ac	ccessories
	71108	C Mount for Microtech
	71113	Standard Vickers test block ø 30mm x 10mm for Microtech
	71503	Object micrometer
	71100	District as in the second of t

Digital micrometers for manual XY stage

UPGRADABILITY

PACK PRESI Touch Semi-auto

## VICKERS

# OTECH MX7 LOW LOADS

The Vickers MX7 and MX7 low load hardness testers with automatic turret offer a complete solution in order to meet the needs of quality laboratories, as well as on-line controls.



- Automatic turret up to 6 positions.
- Vickers and Knoop hardness.
- Automatic load application.
- High-rigidity frame.

UPGRADABILITY

PACK PRESI View Hardness




PACK PRESI Touch Manual




PACK PRESI Touch Semi-auto

## LOAD RANGE (gf)

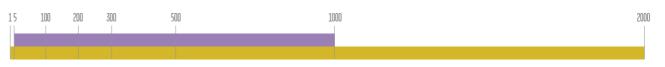

### TECHNICAL FEATURES

	MX7	MX7 low load
Automatic turret	2 objectives x10 x50 1 Vickers indenter	3 objectives x10 x50 x100 1 Vickers indenter + 1 Knoop indenter
Turret options	Up to 4 objectives including x10 x50 + 2 indenters	Up to 4 objectives including x10 x50 x100
Load application	Automatic load application	Automatic load application
Load application speed	50μm/s	50μm/s
Indentation time	5 to 99s	5 to 99s
Precision	0,1µm (x200 - x1000)	0,1µm (x200 - x1000)
Magnification	x100 - x500	x100 - x500 - x1000
Max. measurable length	200µm	200µm
Data output	RS 232C output	RS 232C output
Memory	999 max. memorized measurements	999 max. memorized measurements
Conversions	Conversion to other scales according to SAE (J-417B), ASTM (E-140)	Conversion to other scales according to SAE (J-417B), ASTM (E-140)
Max. sample height	120mm	120mm
Power supply	240V 50/60Hz	240V 50/60Hz
Touchscreen	LCD display with backlight	LCD display with backlight
Lighting	LED	LED

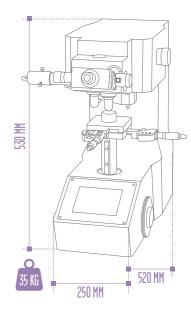

#### **AVAILABLE OPTIONS**



Ref. 71133

Ref. 71175

Ref. 71108



Ref. 71157

Ref. 71176

Ref. 71113













Ref. 71174 Ref. 71503

71164	VICKERS
71134	KNOOP
Objectiv	res
71106	x2.5
71154	x5
71142	x10
71129	x20
71143	x50
71135	x100
Turret	
71131	3-position turret for objectives
71130	4-position turret for objectives
71115	2 indenter Knoop and Vickers
Standar	d vices
71133	50mm opening
71199	100mm opening
Sample	holders and removable holders
71157	Sample holder for non-mounted samples
71109	Single place sample holder
71175	Sample holder 4 places
71176	Sample holder 6 places
71174	Removable holder ø 25mm
71144	Removable holder ø 25.4mm
71110	Removable holder ø 30mm
71111	Removable holder ø 31.7mm
71145	Removable holder ø 38.1mm
71125	Removable holder ø 40mm
71173	Removable holder ø 50mm
Other ad	ccessories
71108	C Mount for Microtech
71113	Standard Vickers test block ø 30mm x 10mm for Microtech
71503	Object micrometer
71120	Digital micrometers for manual XY stage

Ref. 71120



The Vickers VX7 and VX7S hardness testers and semi-macro hardness testers with automatic turret offer complete solution to meet the needs of quality laboratories, as well as production line controls.



- 5-position automatic turret.
- Touchscreen.
- Hardness Vickers, Knoop and Brinnel.
- Automatic load application.
- High-rigidity frame.

UPGRADABILITY

PACK PRESI View Hardness

PACK PRESI Touch Manual




PACK PRESI Touch Semi-auto

# LOAD RANGE (kgf)



### TECHNICAL FEATURES

	VX7	VX7S
Automatic turret	2 objectives x10 x20, 1 Vickers indenter	2 objectives x10 x20, 1 Vickers indenter
Options turret	Up to 4 objectives including x10 x20 + 1 indenter	Up to 4 objectives including x10 x20 + 1 indenter
Load application	Automatic load application	Automatic load application
Load application speed	85µm/s	85µm/s
Indentation time	5 to 99s	5 to 99s
Precision	In accordance with ISO 6507-2, JIS B7725, ASTM (E-384) standards	In accordance with ISO 6507-2, JIS B7725, ASTM (E-384) standards
Magnification	x100, x200	x100 - x200
Max. measurable length	999.9µm - 600µm	999.9µm - 600µm
Data output	RS 232C output	RS 232C output
Memory	999 max. memorized measurements	999 max. memorized measurements
Conversions	Conversion to other scales according to ASTM (E-140) et JIS	Conversion to other scales according to ASTM (E-140) et JIS
Max. sample height	250mm	250mm
Max. sample length	150mm	150mm
Power supply	240V 50/60Hz	240V 50/60Hz
Touchscreen	LCD display with backlight	LCD display with backlight
Lighting	LED	LED

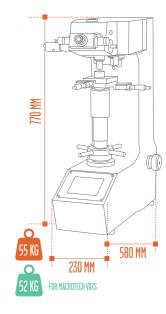

#### **AVAILABLE OPTIONS**



Ref. 71133

Ref. 71175



Ref. 71157

Ref. 71176

Ref. 71141

















Ref. 71174 Ref. 71503

71165	VICKERS	
71156	BRINELL	
Objectiv	/es	
71106	x2.5	
71154	x5	
71142	x10	
71129	x20	
71143	x50	
71135	x100	
Turret		
71131	3-position turret for objectives	
71130	4-position turret for objectives	
Standar	d vices	
71133	50mm opening	
71199	100mm opening	
Sample	holders and removable holders	
71157	Sample holder for non-mounted samples	
71109	Single place sample holder	
71175	Sample holder 4 places	
71176	Sample holder 6 places	
71174	Removable holder ø 25mm	
71144	Removable holder ø 25.4mm	
71110	Removable holder ø 30mm	
71111	Removable holder ø 31.7mm	
71145	Removable holder ø 38.1mm	
71125	Removable holder ø 40mm	
71173	Removable holder ø 50mm	
Other a	ccessories	
71128	Video output + C mount	
71141	Standard Vickers test block ø 64 x 15mm	
71503	Object micrometer	
71120	Digital micrometers for manual XY stage	
71121	Stage adapter for ref. 71122 & 71152	
71122	Manual XY stage 25 x 25mm movement	

Ref. 71120

### ROCKWELL

# MACROTECH RMT1 Macrotech RMT3

Ref 71199

Ref 71117

Rockwell RMT1 and RMT3 hardness testers cover all scales in order to meet the needs of quality laboratories, as well as controls on the production line.




- Automatic indent.
- Direct digital reading.
- Assisted pre-charge.
- Very easy settings.
- New LCD screen.

# LOAD RANGE (kgf)



### TECHNICAL FEATURES

	MACROTECH RMT1	MACROTECH RMT3
Preload mode	Assisted preload (LCD Visual and BIP sound)	Assisted preload (LCD Visual and BIP sound)
Load application	Automatic	Automatic
Starting cycle	Automatic start / Possible in manual	Automatic start / Possible in manual
Indentation time	3 to 99s	3 to 99s
Measurements on plastics	Standard	Standard
Measurement scales	CDAGBFKEHP MLVSR	15N 30N 45N 15T 30T 45T 15W 30W 45W 15X 30X 45X 15Y 30Y 45Y C D A G B F K E H P M L V S R
Data output	RS 232C output	RS 232C output
Memory	999 max. memorized measurements	999 max. memorized measurements
Conversions	In accordance with SAE J417b, ASTM E 140 standards	In accordance with SAE J417b, ASTM E 140 standards
Precision	In accordance with JIS B7726, ASTM (E-18) standards	In accordance with JIS B7726, ASTM (E-18) standards
Max. sample height	200mm	200mm
Max. depth piece	165mm	165mm
Alimentation	240V 50/60Hz	240V 50/60Hz
Touchscreen	LCD display with backlight	LCD display with backlight

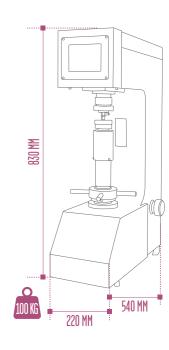

### **AVAILABLE ACCESSORIES**





Ball indenter Diam 1/8", 1/4", 1/2", 3/4"

Steel balls Diam 1/8", 1/4", 1/2", 3/4"

Round stage Diam 200mm

Other stage V table (small), stud, diamond stud

JIG tests on long samples Vari-Rest & Jack-Rest

Micrometric displacement stage for the Jomini tests Mini scale: 1/10mm or 1/160"

#### **AVAILABLE OPTIONS**





Standard	vices
----------	-------

71133	50mm opening
71199	100mm opening
Other a	ccessories
71167	Standard Rockwell C test block ø 64 x 15mm

# PRESI VIEW & PRESI TOUCH

PRESI View and PRESI Touch softwares have been developed by our engineers around a new generation of digital cameras, to meet the needs of digital imaging laboratories and users.


**Very intuitive,** they handle the acquisition, treatment and editing of images.

Thanks to an ergonomic architecture, the software is user-friendly.


Monochrome or color, our digital cameras are equipped with 1/2" CMOS sensors, with Rolling or Global Shutter, depending on the model. Our USB2 1.3 to 5 Mpixels cameras offer excellent **fluidity** and are **easy to install.** 

# THE RIGHT SOFTWARE FOR THE RIGHT USAGE

	PRESI View	PRESI Touch
Manual indent analysis	•	•
Automatic indent analysis	•	•
Single indent management	•	•
Multi-language software	•	•
Pattern management		•
Integrated report		•
Hardness tester control		•

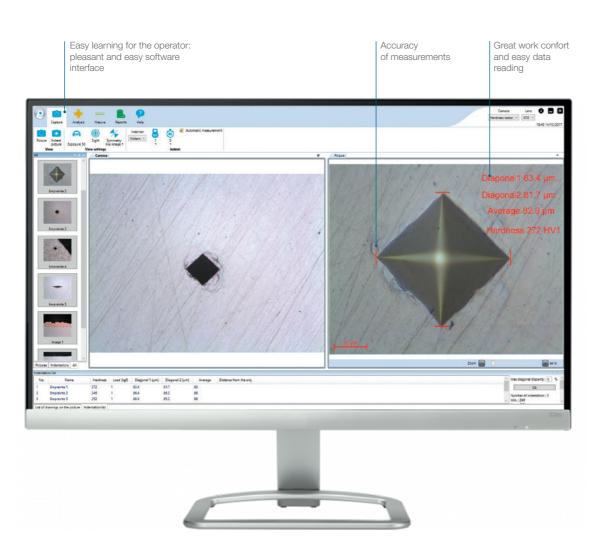


#### PRESI View - Hardness interface

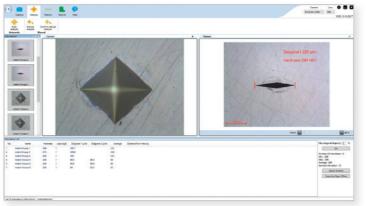

#### HARDNESS CONTROL

Image analysis and manual reading. Vickers and Knoop measurement.


#### PRESI View - Full interface

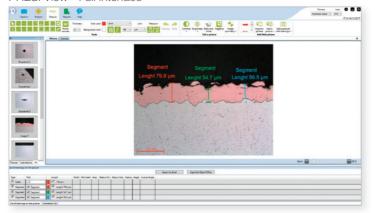

#### DIMENSIONAL CONTROL

Lenght measurements, angles, diameters, surfaces on cuts of pieces such as layers painting, surface treatments, deposits, etc.


#### PRESI Touch interface

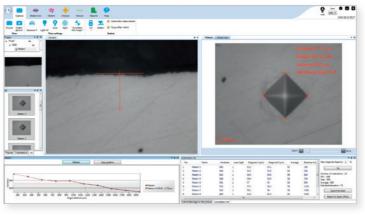

#### THERMAL TREATMENT CONTROL

Depth control for heat treatments by direct measurement or by using composed measuring tools, such as projection.

#### PRESI Touch interface

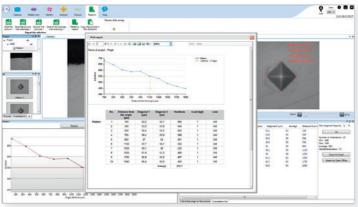

#### PRODUCTION CONTROL

Precise, intuitive and fast software for obtaining results in production controls.

# PRESI VIEW HARDNESS PACK

# ACCESSIBLE AND INTUITIVE DIGITAL IMAGERY FOR SINGLE INDENTS

Specially designed for single indent analysis, the PRESI View Hardness software has a simple interface and a pleasant workspace. Thanks to easily identifiable icons, the software is user-friendly and the operator is quickly autonomous on his tasks. On-screen visualisation of the indent, as well as the assisted analysis, offer a great work comfort.

#### **FUNCTIONALITIES**


Language	Software available in 3 languages: English + French + German
Indentation type	Single indent
Software	Simultaneous functioning with multiple cameras on different acquisition means (macro lens, stereomicroscope, microscope, hardness tester and Vickers micro hardness tester)
	Manual or automatic measurement
	Miniature view of pictures
	Customizable formatting
	Streamlined and intuitive interface
Setup menu	Easy and fast camera settings Calibrations achievable in seconds
	Presets of the measurement display
Exploitation of results	Many recording formats
	Automatic storage of results in database
	Pictures exportation in format: JPEG / PNG / BMP / GIF
	Data exportation in format: Excel / Open Office
Compatibility	The software is compatible with all our Microtech, Macrotech VX7 and VX7S hardness testers, and all brands equipped with a video output and C mount

### EXTENDED FEATURES WITH PRESI VIEW MEASURE


Lengths, thicknesses, markers, angles...

Rays, diameters, perimeters, surfaces, circles, arcs...

Text boxes insertions, titles and arrow

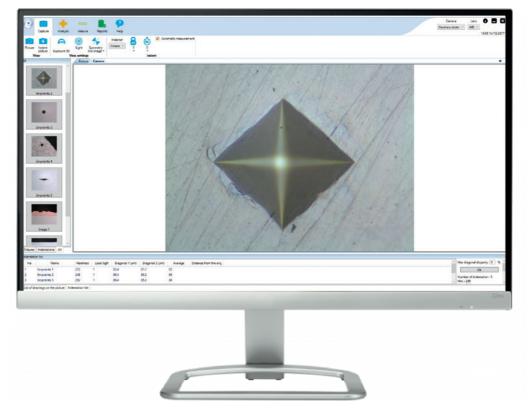


- **EASY AND INTUITIVE**
- **₩ IMAGE FLUIDITY**
- **▼ AUTOMATIC ANALYSIS**
- **▼ DATA STORAGE**

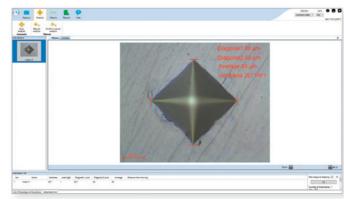


PRESI View hardness

Automatic or manual measurement of Vickers indents

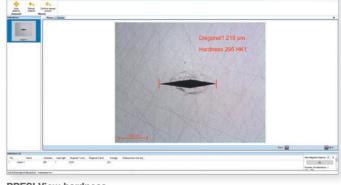


PRESI View hardness

Automatic or manual measurement of Knoop indents.

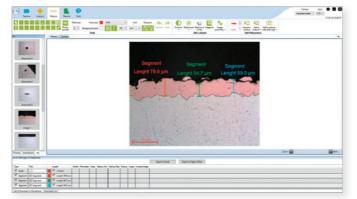

PRESI View Ful

The optional measurement module provides a large number of measurement tools such as measuring angles, polygons, projections, etc.

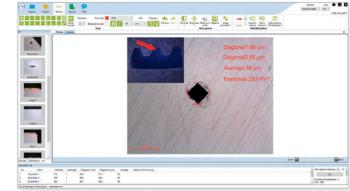

#### PRESI View Full

The addition of a thumbnail enriches the number of information on a photo. The drafting of the report is thus facilitated.

# PACK PRESI TOUCH MANUAL


### CREATE AND EASILY MANAGE YOUR HARDNESS FILIATIONS

The PRESITouch Manual Pack is the 2<sup>nd</sup> level of computerization, allowing the creation and management of hardness patterns. The integrated image analysis in the software allows an easy and reliable interpretation.


Designed to facilitate manual patterns and guarantee a perfect repeatability of the results, the PRESI Touch Manual software distinguishes itself by a clear, uncluttered and fully customizable interface. It has numerous features such as automatic measurement or manual indenting. The navigation is simplified, thanks to contextual menus, for a quick start by the operator.

# **FUNCTIONALITIES**

Language	Software available in 3 languages: English + French + German
Indentation type	Single indent  Manual pattern with travel assistant: indication of the coordinates of the moves to be made
Equipment	Measurement and analysis software
	USB2 digital camera, 1.3M pixels: the transmitted image on the computer screen is accurate and fluid
	Automatic or manual brightness: the software offers an optimal brightness setting on the sample to be analyzed
	Turret management:  - Manual: the software indicates via pop-up which position to select  - Motorized: the software automatically controls the change of position
Features	Automatic or manual measurement: the operator can choose to let the PRESI Touch software automatically analyze the indents, or manually perform the interpretation
	Automatic storage of results and photos into the database
	Search engine: allows you to quickly find already completed projects
	Pattern settings: graphical and dynamic menu, allowing real time monitoring of the programming
	Hardness tester / PC communication: the operator can control and interact directly with the hardness tester via the software
	Difference of load alert: in case of a difference between the programmed load via the software and the manually defined load by the operator, an alert pops up on screen
	Analysis reports: numbers, graphs and statistics can be exported in one click in Word, Excel or PDF formats
Compatibility	PRESI Touch Manual software is compatible with all Microtech, Macrotech VX7 and VX7S hardness testers

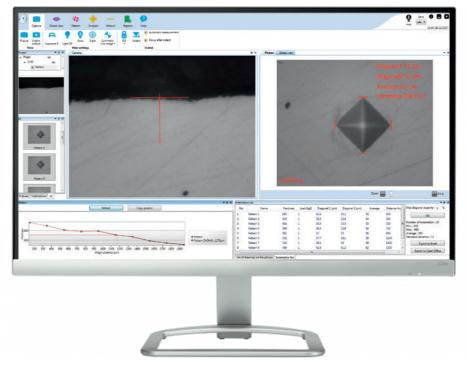


- **INTEGRATED MEASURING TOOLS**
- PRECISION AND REPEATABILITY OF MEASUREMENTS
- GREAT WORK COMFORT AND EASY DATA READING
- **▼ USER-FRIENDLY SOFTWARE**

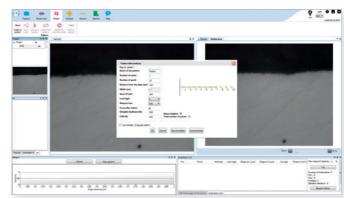


#### Pattern creation


A graphic and dynamic assistant allows pattern visualisation during its programing.

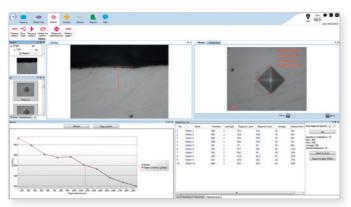

The fully configurable interface allows the visualization of all results, regardless of the selected function.

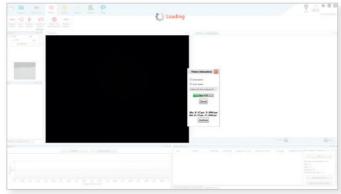

The operator is guided by the software. XY coordinates of the indentations to perform are shown on the screen.

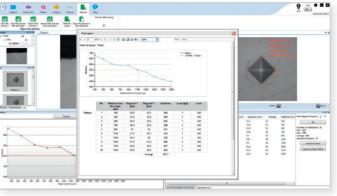

#### **Automatic report**


In one click, a report formats the results.
This report is printable or recordable in many formats.

# PACK PRESI TOUCH SEMI-AUTO

## THE XY AUTOMATIC DISPLACEMENT **SERVING YOUR PATTERNS**

Developed in an effort to optimize efficiency and to free the user from tedious operations and increase productivity, the Semi-Auto Pack incorporates a motorized stage, driven by joystick.


Its XY automatic displacement accuracy offers real time saving, repeatability and guarantees consistency in the interpretation of the results. PRESI Touch pattern storage facilitates the operator's work. The software allows pattern creation in no time and instant editing of a hardness profile. Easy and automatic measurements, ideal for serial checks.

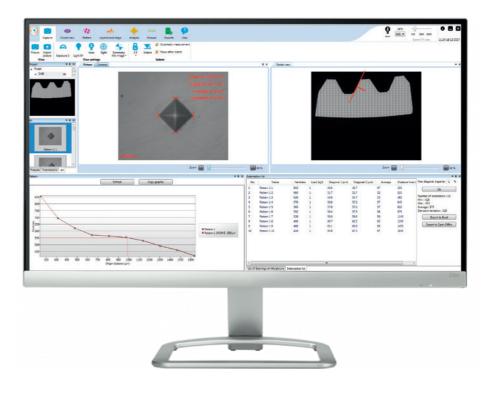


- **COMPLETE, RELIABLE AND POWERFUL**
- ₩ VERY HIGH QUALITY IMAGE
- **▼ INTUITIVE NAVIGATION**
- TIME SAVING

#### **FUNCTIONALITIES**

Language	Software available in 3 languages: English + French + German
Indent type	Single pattern Semi-automatic pattern
Equipment	Multilingual software for measurement and image analysis
	USB2 digital camera, 1.3M pixels: the image retransmitted on the computer screen is accurate and fluid
	Automatic or manual brightness: the software offers an optimal brightness setting on the sample to be analyzed
	Control box, motorized stage and joystick: a set of peripherals allowing fast and precise movements on the surfaces to be analyzed
Features	Manual or automatic measurement: the operator can choose to let the PRESI Touch software automatically analyze indents or manually manage the control
	Pattern settings: graphical and dynamic menu, allowing real time monitoring of the programming
	Hardness tester / PC communication: the operator can control and interact directly with the hardness tester via the software
	Overview: possibility to photograph all or part of the sample to be analyzed and to directly place the patterns in the right places
	Deformed indent alert: a colored line appears in the result table when d1 = d2 +/- x% (adjustable tolerance)
	Difference of load alert: in case of a difference between the programmed load via the software and the manually defined load by the operator, an alert pops-up on screen
	Analysis reports: numbers, graphs and statistics can be exported in one click in Word, Excel or PDF formats
	Image analysis: automatic or manual indent analysis on etched or non-etched samples
	Single indents, regular or irregular patterns: in order to meet numerous needs, the software allows the execution of isolated points, the programming, the backup and the loading of a pattern or of a set of patterns
Compatibility	The PRESI Touch Semi-auto software is compatible with all our Microtech. Macrotech VX7 and VX7S hardness testers

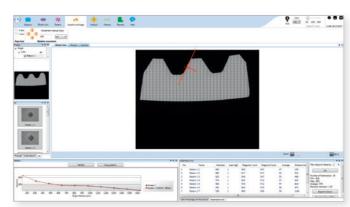


The motorized stage makes it possible to reconstruct, by photos, the sample to be analyzed.

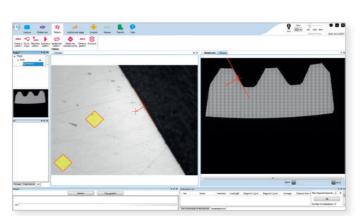


#### Virtual pattern

Once the pattern is programmed, it virtually appears on the camera view. It is possible to visualize the location of the different indents, as well as their estimated size

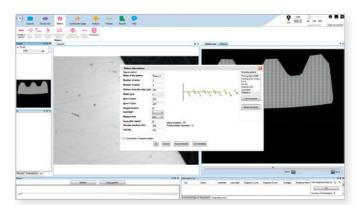


A graphic and dynamic assistant allows pattern visualisation during its programming. It is possible to place the pattern directly on the overview.

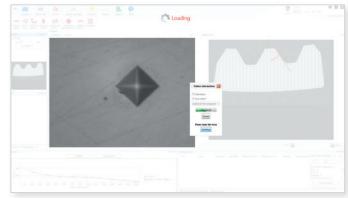


#### Measuring cycle (automatic or manual)


# MICROTECH MX3 - MX7 - MX7 LOW LOADS


# MACROTECH VX7- VX7S

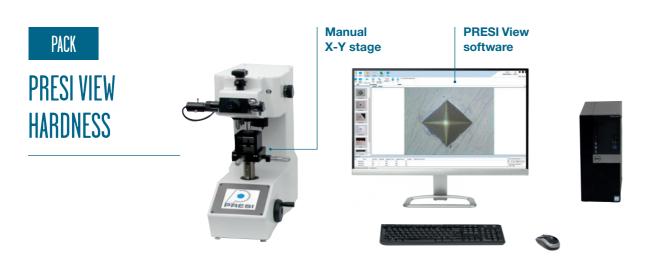



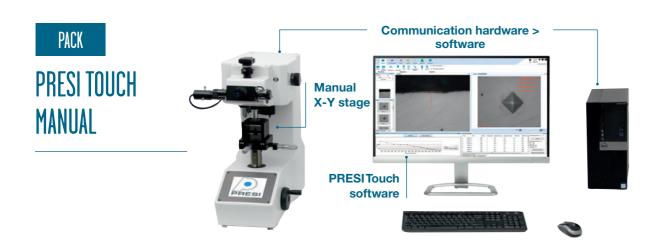

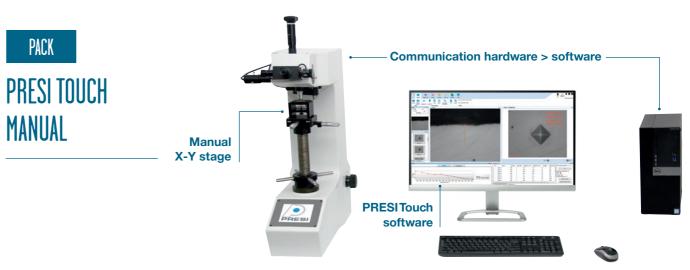

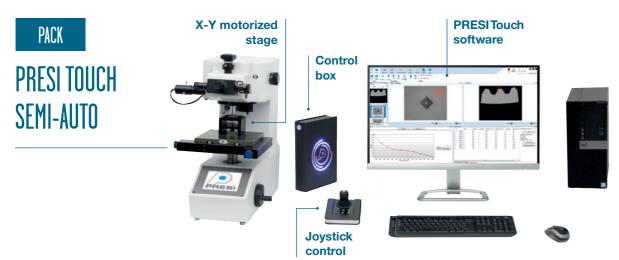



18